



CONCRETE FORMING

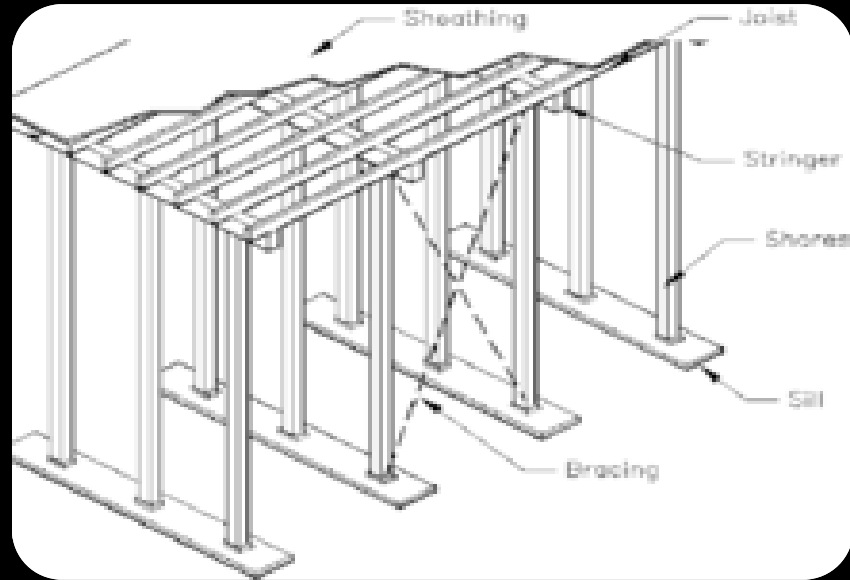

shutter sits on top of "cross",
verticals between battens
above deck formply provide
the side shutter carrying

the
bottom or soffit
shutter.

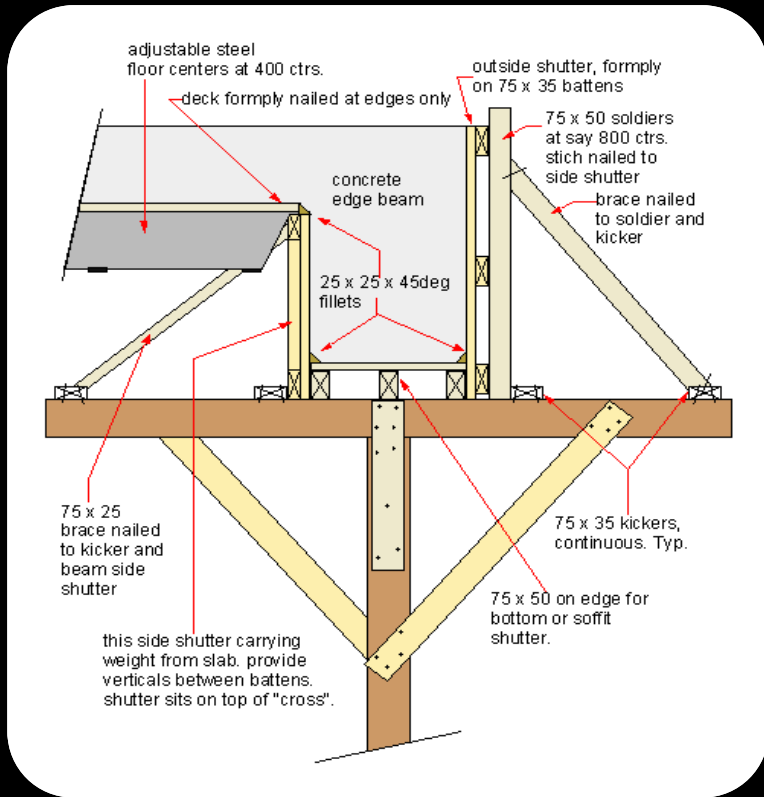



www.epoolscapes.com



12" Slimline sidewalk form



4" Slimline sidewalk form



www.epoolscapes.com



6" steel flexible radius form used for flatwork applications



www.epoolscapes.com